

## Release note for Server Imaging Utility March 2017

### Notes

BTBackup (now moved into the Server Manager) will now backup the BlackTrax folder in btuser instead of the documents folder. This means that the backup server needs a shared BlackTrax folder in order for the Server Manager to register it. This folder is shared by default in this image.

### Included BlackTrax Release:

v2.1.2

### Dongle Date Requirement:

July 26<sup>th</sup> 2016

### Major changes:

- Server Manager, an easier way to back up your server and configure the profile
  - The new BlackTrax folder is what is now backed up instead of the documents folder
- Fixed the issue where newer versions of Chrome would be blocked

### Known issues:

- Motive may freeze the first time it's launched

### Features and Fixes:

#### **Bug**

- *Fixed: Latest Chrome versions are no longer blocked*
- *Fixed: Domain Firewall is now disabled*

#### **New Feature**

- *Server Manager application that replaces BTBackup and BlackTrax Profile Manager*
  - *View currently installed versions of all BlackTrax applications*
  - *Convenient access for license and library folder locations*
  - *Rename server directly from this application*
  - *Assign the 'Main' or 'Backup' profile to your server*
    - *An option to also change the name of server to match the profile has been added*
  - *Backup the BlackTrax folder of the main server to the backup server's BlackTrax folder and create an archive of old files on the backup*
    - *Progress reporting highlighting how many files are left*
    - **Note:** *The backup portion of the Server Manager will no longer use the documents folder, it will now use the new BlackTrax folder*
  - *View all NICs and their statuses*
  - *View system information including image version*

- *New IP address for Device Manager – 10.133.5.9 added to the BTNet NIC*
- *Added sACNView to the server*

### **Improvement**

- *New installation process*
  - *Displays license information and status*
  - *Reporting of installation process and status of each step*
  - *System will automatically reboot into Windows without first needing to remove the boot media*
- *New setup process upon first server boot (configuration of the server is moved to this step now, instead of the installation process)*
  - *Server will be named either 'BTSERVER-MAIN' or 'BTSERVER-BACKUP' depending on configuration*
  - *Main or Backup wallpaper will automatically be applied to the server depending on configuration*
- *New BlackTrax folder in the btuser folder*
- *Monitor now starts up automatically*
- *Updated Wireshark to version to 2.2.5*
- *USB Autoplay is now disabled by default*

### **Design Review**

- *New startup animation upon first boot*
- *New imaging utility wallpaper*
- *Server Manager is pinned to the Start Menu and Task Bar*
- *Themes default the wallpaper to stretch instead of fill now*
- *Monitor is visible in the main Task Tray by default*